 





 




 









 

 
 






 





 





 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Nicam	 Audio / Lang I/II
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 List	 Smart / List
 FAV/List	 Fav / Marker / PC
 CH-	 CH- / Page-
 Tv/Radio	 TV/Radio /





Original	Replacement
 EPG	 Guide / EPG / -/--
 Aspect	 Shift + Picture / Format
 Freeze	 Pause / Step / Freeze
 Index	 Info / Angle
 Cancel	 Shift + Exit / Cancel / Clear
 Subpage	 Subtitle / EQ
 Text	 Text / Goto
 Reveal	 D.Menu / Top
 Size	 Zoom / Size
 Hold	 Stop / Hold
 Mix	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

Original	Replacement

