



Original	Replacement
	Power
	Setup / OPT /
	Eject / Surround
	Sound / Title
	Menu / Home
	Shift + Text /
	Display / Media
	Mute / Dimmer
	Subtitle / EQ
	Audio / Lang I/II
	Info / Angle
	Play / Slow
	Up
	Stop / Hold
	Left
	OK
	Right

Original	Replacement
	<< / Tune-
	Down
	>> / Tune+
	I<< / Preset-
	AV / Input / RDS
	Pause / Step / Freeze
	>>I / Preset+
	Zoom / Size
	TV/Radio /
	Green / APP / Repeat
	Back / Return
	1
	2
	3
	Yellow / YouTube / Repeat
	4
	5



