







 






Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <</Rev	 << / Tune-
 >>/Fwd	 >> / Tune+
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Title	 Sound / Title
 Language	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Mode	 Picture / Format
 Zoom	 Zoom / Size
 Time	 Sleep / Timer
 Prog	 TV/Radio /

Original	Replacement
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 N/P	 Smart / List
 Vol-	 Vol-
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Replacement		Original	Replacement
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	10+	Guide / EPG / -/--			
	0	0			
	Resume	Red / Netflix / Search			
	Repeat	Green / APP / Repeat			
	A-B	Yellow / YouTube / Repeat			
	L/R	Blue / Prime Video / Random			
	Slow	Shift + Play /			
	Step	Shift + Pause / Step /			

	Original	Replacement		Original	Replacement

