























 














Original	Replacement
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repeticione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 <  Ralent	 CH- / Page-





	Original		Replacement
	Ralent I >		CH+ / Page+
	<< F.REV		<< / Tune-
	>> F.FWD		>> / Tune+
	Step		Shift + Pause / Step /
	Zoom		Zoom / Size
	I<< Prec		I<< / Preset-
	>>I Succ		>>I / Preset+
	Sottotitoli		Subtitle / EQ
	NTSC/PAL		Picture / Format
	Volume-		Vol-
	Volume+		Vol+
	Sleep / Timer		Sleep / Timer
	Track		Text / Goto
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer

Original	Replacement

