



| Original   | Replacement                 |
|------------|-----------------------------|
| CD/RANDOM  | Blue / Prime Video / Random |
| Band/Tuner | +  Shift + 6                |
| Power      | Power                       |
| 1          | 1                           |
| 2          | 2                           |
| 3          | 3                           |
| 4          | 4                           |
| 5          | 5                           |
| 6          | 6                           |
| 7          | 7                           |
| 8          | 8                           |
| 9          | 9                           |
| Program    | TV/Radio /                  |
| 0          | 0                           |
| +10        | Guide / EPG / -/--          |
| Play       | Play / Slow                 |
| Pause      | Pause / Step / Freeze       |

| Original                       | Replacement              |
|--------------------------------|--------------------------|
| File Search                    | Red / Netflix / Search   |
| Stop                           | Stop / Hold              |
| Clock/Sleep                    | Sleep / Timer            |
| P+                             | CH+ / Page+              |
| Timer                          | +  Shift + Sleep / Timer |
| I<< Search/Skip/Tuning         | I<< / Preset-            |
| Display                        | Display / Media          |
| Search/Skip/Tuning g/Album >>I | >>I / Preset+            |
| Stereo/Beat Cut                | Sound / Title            |
| P-                             | CH- / Page-              |
| EQ/X-Bass                      | Audio / Lang I/II        |
| Volume-                        | Vol-                     |
| Mute                           | Mute / Dimmer            |
| Volume+                        | Vol+                     |

