



| | Original | Replacement | | Original | Replacement |
|--|----------|-------------|--|-----------------------------|-------------|
| | | Vol+ | | Vol+ | |
| | | Vol- | | Vol- | |
| | | Power | | Power | |
| | | Mono | | Audio / Lang I/II | |
| | | Sleep | | Sleep / Timer | |
| | | Disc Change | | AV / Input / RDS | |
| | | Open/Close | | Eject / Surround | |
| | | Display | | Display / Media | |
| | | Morphing | | Subtitle / EQ | |
| | | ←0 | | Left | |
| | | 0→ | | Right | |
| | | Disc 1 | | 1 | |
| | | Disc 2 | | 2 | |
| | | Disc 3 | | 3 | |
| | | Clear | | Exit / Cancel / Clear | |
| | | PGM | | TV/Radio / | |
| | | Repeat | | Green / APP / Repeat | |
| | | Random | | Blue / Prime Video / Random | |
| | | AUX → | | OK | |
| | | Tape I-II | | 5 | |
| | | Band | | D.Menu / Top | |
| | | CD | | Shift + 3 | |
| | | Play/<> | | Play / Slow | |
| | | Pause | | Pause / Step / Freeze | |
| | | I<</Track | | I<< / Preset- | |
| | | >>/Track | | >>I / Preset+ | |
| | | Stop | | Stop / Hold | |
| | | << | | << / Tune- | |
| | | >> | | >> / Tune+ | |

