 

 











 

 











 





 


 





Original	Replacement
 Power	 Power
 EPG	 Guide / EPG / -/--
 TXT	 Text / Goto
 Source	 AV / Input / RDS
 Q.Menu	 D.Menu / Top
 */O	 Picture / Format
 */Q	 Setup / OPT /
 [+]	 Zoom / Size
 i	 Info / Angle
 Netflix	 Shift + Red / Netflix /
 Exit	 Exit / Cancel / Clear
 Multimedia	 Display / Media
 Left	 Left
 Up	 Up
 Right	 Right
 Internet	 Smart / List
 OK	 OK

Original	Replacement
 Menu	 Menu / Home
 Down	 Down
 Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6	6		
	7	7		
	8	8		
	9	9		
	[TV]	TV/Radio /		
	0	0		
	↔	Fav / Marker / PC		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Rec	Rec / Rec Mode		
	Lang	Audio / Lang I/II		
	Subt.	Subtitle / EQ		

