











































 



 


 








 
























Original	Replacement	Original	Replacement
 Power	 Power	 Rec	 Rec / Rec Mode
 Tv/Radio	 TV/Radio /	 Stop	 Stop / Hold
 Red	 Red / Netflix / Search	 I<<	 I<< / Preset-
 Green	 Green / APP / Repeat	 FAV	 Fav / Marker / PC
 Yellow	 Yellow / YouTube / Repeat	 >>I/Index	 >>I / Preset+
 Blue	 Blue / Prime Video / Random	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Source	 AV / Input / RDS
 Text	 Text / Goto	 Up	 Up
 Hold	 Shift + Stop /	 Left	 Left
 TVG	 Guide / EPG / -/--	 OK	 OK
 Audio	 Audio / Lang I/II	 Right	 Right
 Play	 Play / Slow	 Exit	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze	 Down	 Down
 Size	 Zoom / Size	 Aspect	 Picture / Format
 <<	 << / Tune-	 Vol+	 Vol+
 Subpage	 Eject / Surround	 Mute	 Mute / Dimmer
 >>	 >> / Tune+	 CH+	 CH+ / Page+





Original	Replacement
 Vol-	 Vol-
 Info	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 +  Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return

Original	Replacement

