

 





























 





Original	Replacement
 Operate	 Power
 On Screen	 Display / Media
 Setup	 Setup / OPT /
 Open / Close	 Eject / Surround
 Dimmer	 Mute / Dimmer
 Gamma	 Picture / Format
 Mode	 Smart / List
 Marker	 Fav / Marker / PC
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Title	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Right	 Right

Original	Replacement
 Return	 Back / Return
 Down	 Down
 Enter	 OK
 1	 1
 2	 2
 3	 3
 Repeat	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B Repeat	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 Skip >>I	 >>I / Preset+
 Clear	 Exit / Cancel / Clear
 0	 0





 








 

 





 
















Original		Replacement		Original		Replacement	
	+10		Guide / EPG / -/--				
	I<< Skip		I<< / Preset-				
	<< Rev		<< / Tune-				
	Play		Play / Slow				
	Fwd >>		>> / Tune+				
	Direct Skip		Rec / Rec Mode				
	Stop		Stop / Hold				
	Still / Pause		Pause / Step / Freeze				





Original	Replacement
 Operate	 Power
 On Screen	 Display / Media
 Setup	 Setup / OPT /
 Open / Close	 Eject / Surround
 Dimmer	 Mute / Dimmer
 Gamma	 Picture / Format
 Mode	 Smart / List
 Marker	 Fav / Marker / PC
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Title	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Right	 Right

Original	Replacement
 Return	 Back / Return
 Down	 Down
 Enter	 OK
 1	 1
 2	 2
 3	 3
 Repeat	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B Repeat	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 Skip >>I	 >>I / Preset+
 Clear	 Exit / Cancel / Clear
 0	 0





Original		Replacement		Original		Replacement	
	+10		Guide / EPG / -/--				
	I<< Skip		I<< / Preset-				
	<< Rev		<< / Tune-				
	Play		Play / Slow				
	Fwd >>		>> / Tune+				
	Direct Skip		Rec / Rec Mode				
	Stop		Stop / Hold				
	Still / Pause		Pause / Step / Freeze				

