




 

 
 
 
 
 

 

 





 
 

 
















 


 










Original	Replacement	Original	Replacement
	TIMER AV		0
	Power		Recall
	TV		Vol+
	PROG SLEEP		[i+]
	PICTURE FORMAT		P+
	SOUND DUAL		Vol-
	AD SUBT		Mute
	1		P-
	2		Quick
	3		[.]
	4		[>]
	5		Text
	6		List
	7		Menu
	8		↑↑
	9		Guide
	SHIFT + AD SUBT		Up
			0
			PRE-CH
			Vol +
			INFO
			Ch +
			Vol -
			Mute
			Ch -
			Smart
			SHIFT + OPT
			Options
			Text
			List
			Menu
			SHIFT + Up
			Guide
			Up





Original		Replacement		Original		Replacement	
	<<	 + 	Shift + Left		Green		Green
	Left		Left		Yellow		Yellow
	OK		Ok		Blue		Blue
	Right		Right				
	>>	 + 	Shift + Right				
	Back		Back				
	Down		Down				
	Exit		Exit				
	↓↓	 + 	Shift + Down				
	<</[≡+]		<<				
	Play		Play				
	>>/[≡◇]		>>				
	I<</[≡?]		I<<				
	Stop		Stop				
	Pause/Step		Pause				
	>>I/[O]/[≡x]		>>I				
	Red		Red				

