






















 







Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Home	 Shift + Menu /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Q.View	 Setup / OPT /
 0	 0
 Info	 Info / Angle

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 APP Store	 Display / Media
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Tool	 TV/Radio /
 FAV	 Fav / Marker / PC



