


 




 







 


 
 

 

 

 
 

 


 
 

 


 
 

 


 
 




 



 

 


 

 







 




 

 
 
 
 







 




Original		Replacement		Original		Replacement	
	Standby		Power		Red/Sound		Red
	1		1		Green/Picture		Green
	2		2		Yellow/VGA		Yellow
	3		3		Blue/TV		Blue
	4		4		[≡+]/Hold		Options
	5		5		[≡?]/Reveal		TV/R
	6		6		[≡◇]/Size		Format
	7		7		[ /≡]		Smart
	8		8		[≡i]/Index		Shift + Info
	9		9		[O]/Subpage		Media
	0		0		[≡]/Text		Text
	P.P		Back		Vol+		Vol +
	FAV		Pre Ch		Vol-		Vol -
	DTV EPG		Guide		CH+		Ch +
	Input		AV		CH-		Ch -
	Mute		Mute		PIP		3D
	Audio		Dual		Wide		Eject





Original	Replacement	Original	Replacement
 Info	 Info		
 Sleep	 Sleep		
 Menu	 Menu		
 Exit	 Exit		
 Menu DTV	 D. Menu		
 Subtitle/Subtitle DTV	 Subt		
 CH View/CHList	 List		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		

