 


 
 



 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


 

 

 

 

 



 






 
 





 
 





Original	Replacement	Original	Replacement
 Power	 Power	 List/+10	 Guide
 Mute	 Mute	 Recall/Program	 Back
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 I/II/Audio	 Dual	 Info/Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/Enter	 Ok
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Red/DVD Setup	 Red
 0/10	 0	 Green/A-B	 Green





Original	Replacement	Original	Replacement
 Yellow/Angle	 Yellow		
 Blue/Repeat	 Blue		
 Subtitle	 Subt		
 Play/Hold	 Play		
 Pause	 Pause		
 Size	 Format		
 D.Dis/Reveal	 3D		
 D.Menu/Mix	 D. Menu		
 Zoom/Index	 +  Shift + Eject		
 I<</FAV	 I<<		
 >>I/Subpage	 >>I		
 Stop	 Stop		
 Tv/Radio	 TV/R		
 <<	 <<		
 >>	 >>		
 Eject/EPG	 Eject		

