



 








 












 


 









Original	Replacement	Original	Replacement
	Power		Left
	Red		Up
	Green		Right
	Yellow		P +
	Blue		CH+ / Page+
	<<		OK
	Play		CH- / Page-
	>>		Down
	<		P < P
	Pause		Smart / List
	>		Back / Return
	Info		Guide / EPG / -/--
	Stop		1
	Rec		2
	Titles		3
	Exit		4
	Menu		5
			6
			7



