
 

 

 







 




















Original	Replacement	Original	Replacement
 Power	 Power	 Repeat	 Text
 Open / Close	 Eject	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / Seek +	 Right
 5	 5	 Left / Seek -	 Left
 6	 6	 Play / Pause	 Ok
 7	 7	 Play / Pause	 Play
 8	 8	 Play / Pause	 Pause
 9	 9	 <<	 <<
 0	 0	 >>	 >>
 10+	 Guide	 Stop	 Stop
 EQ	 Smart	 I<<	 I<<
 Mute	 Mute	 >>I	 >>I
 Prog	 Sleep	 Source	 AV
 Random	 D. Menu	 CD / USB	 Media





Original		Replacement		Original		Replacement	
	Bass		Options				
	Auto		Subt				
	Save		Format				
	Vol +		Vol +				
	Vol -		Vol -				
	Treble		3D				
	Intro		Info				
	ST / MO		Dual				

