





 

Original	Replacement
 Power	 Power
 Display	 Info
 N/P	 Pre Ch
 Open / Close	 Eject
 Language	 Dual
 Angle	 Format
 Subtitle	 Subt
 Prog	 Sleep
 Key b	 Ch -
 Key #	 Ch +
 Return	 Back
 View	 3D
 Mute	 Mute
 PDVD	 Smart
 Time	 AV
 Zoom	 Shift + Eject
 Menu	 Menu

Original	Replacement
 Title	 Media
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 PBC	 Red
 A/B	 TV/R
 Repeat	 Text
 L/R	 Green
 RAN	 Yellow
 Volume+	 Vol +
 Volume-	 Vol -
 Step	 Shift + Pause
 Resume	 Shift + Stop
 1	 1





	Original	Replacement		Replacement
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0/10		0	0
	10+		GUIDE	Guide
	Clear / EQ		CLEAR EXIT	Exit
	REV		<<	<<
	FWD		>>	>>
	Prev		I<<	I<<
	Next		>>I	>>I
	Stop		■	Stop
	Play		PLAY MODE	Play

	Original	Replacement		Replacement
	Pause		II	Pause
	Slow		REC MODE	Rec

