





 


















 
























 




 






 









Original	Replacement
	 Power
	 Smart / List
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Red / Netflix / Search
	 Rec / Rec Mode
	 Info / Angle
	 Play / Slow

Original	Replacement
	 Menu / Home
	 Display / Media
	 Fav / Marker / PC
	 Up
	 >> / Tune+
	 Left
	 I<< / Preset-
	 OK
	 Right
	 >>I / Preset+
	 Back / Return
	 Down
	 << / Tune-
	 Exit / Cancel / Clear
	 Pause / Step / Freeze
	 Stop / Hold
	 Vol+





Original	Replacement
Vol-	Vol-
Iris+	Shift + Up
Focus+	Shift + CH+ /
Zoom+	CH+ / Page+
F1	Green / APP / Repeat
Iris-	Shift + Down
Focus-	Shift + CH- /
Zoom-	CH- / Page-
F2	Yellow / YouTube / Repeat

Original	Replacement

