
 



 




 
 

 



 








 

 

 




 





 








Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Display	 Display / Media
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 0	 0	 FAV+	 Shift + Yellow / YouTube /
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Repeat/FAV-	 Shift + Green / APP /
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Auto	 Eject / Surround	 Text	 Text / Goto





Original		Replacement		Original		Replacement	
	<<		<< / Tune-		Subtitle		Subtitle / EQ
	>>/Hold		>> / Tune+				
	I<</Index		I<< / Preset-				
	>>I/Size		>>I / Preset+				
	Play		Play / Slow				
	Pause/Timeshift		Pause / Step / Freeze				
	Stop/Subpage		Stop / Hold				
	Zoom/Reveal		Zoom / Size				
	Sleep		Sleep / Timer				
	Tv/Radio		TV/Radio /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Audio/Nicam		Audio / Lang I/II				
	Guide		Guide / EPG / -/--				
	Rec		Rec / Rec Mode				

