 





























	Original	Replacement		Original	Replacement
	Source	 RDS AV INPUT	AV / Input / RDS		
	Power		Power		
	Vol-		Vol-		
	Vol+		Vol+		
	I<<	 PRESET-	I<< / Preset-		
	>>I	 PRESET+	>>I / Preset+		
	ESS	 LIST SMART	Smart / List		
	Play		Play / Slow		
	Pause	 STEP-FREEZE	Pause / Step / Freeze		
	P1	 TV 1	1		
	P2	 DVD 2	2		
	P3	 CD-STB 3	3		
	P4	 VIDEO 4	4		

