 



 











 





 



 



 



 

 

 




 
 







 
 






 

 

 







| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Standby |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  EPG |  Guide / EPG / -/- |
|  1 |  1 |  Exit |  Exit / Cancel / Clear |
|  2 |  2 |  Up |  Up |
|  3 |  3 |  CH+ |  CH+ / Page+ |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Vol- |  Vol- |
|  6 |  6 |  OK |  OK |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Vol+ |  Vol+ |
|  9 |  9 |  Down |  Down |
|  FAV |  Fav / Marker / PC |  CH- |  CH- / Page- |
|  0 |  0 |  Text |  Text / Goto |
|  Recall |  Back / Return |  Red |  Red / Netflix / Search |
|  Audio |  Audio / Lang I/II |  Green |  Green / APP / Repeat |
|  Subtitle |  Subtitle / EQ |  Pause |  Pause / Step / Freeze |
|  Info |  Info / Angle |  Tv/Radio |  TV/Radio / |



Program

