



 

 


 
 

 
 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original	Replacement
Exit	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Index	Info / Angle
Size	Zoom / Size
Reveal	D.Menu / Top
Mix	Setup / OPT /
Play	Play / Slow
Pause/Hold	Pause / Step / Freeze
I<</Cancel	I<< / Preset-
>>/Subpage	>>I / Preset+
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC
Stop	Stop / Hold
<</FAV-	<< / Tune-
>>/FAV+	>> / Tune+
Media	+ Shift + Display / Media
Rec	Rec / Rec Mode

Original	Replacement
Timeshift	Smart / List
Tv/Radio	TV/Radio /

