










 



 



 
 




Original	Replacement	Original	Replacement
	Power		Power
AUX	AUX		7
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
	Vol+		Vol+
	Vol-		Vol-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+

