






 

 





 

 



 







 

 






 














 

 










 


Original	Replacement
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Key Up	 Ch +
 Key Down	 Ch -
 Zoom	 Shift + Eject
 Display	 Info
 Echo Up	 Shift + Ch +

Original	Replacement
 Echo Down	 Shift + Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Setup	 Options
 Mute	 Mute
 Clear	 Exit
 Prog	 Sleep
 Subtitle	 Subt
 Language	 Dual
 Title-Return	 Back
 A-B	 TV/R
 Pause	 Pause





Original		Replacement		Original		Replacement	
	Play		Play				
	Stop		Stop				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Angle		Red				
	Time		Shift + AV				
	Repeat		Text				
	Karaoke		Power				
	PBC		Smart				
	R/L		3D				
	N/P		AV				
	Step		Media				
	Slow		Yellow				

