
 


 







 
 
 



 
 
 
 
 


 
 






Original	Replacement	Original	Replacement
 On/Off	 Power	 Sound	 Dual
 Mute	 Mute	 Source	 AV
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Menu	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Back	 Back
 6	 6	 FAV	 Shift + Pre Ch
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Tv Guide	 Guide	 OK	 Ok
 Recall	 Pre Ch	 Info	 Info
 Vol+	 Vol +	 Text	 Text
 Vol-	 Vol -	 Subtitle	 Subt
 Picture	 Format	 TV	 TV/R





Original		Replacement		Original	Replacement
	You Tube		Media		
	Netflix		Shift + Media		
	Smart		Smart		
	Rec/DVD Menu		Rec		
	I<<		I<<		
	>>I		>>I		
	Stop		Stop		
	Rec List/DVD		List		
	<<		<<		
	>>		>>		
	Play		Play		
	Pause		Pause		
	Red/Goto		Red		
	Green/A-B		Green		
	Yellow/Angle		Yellow		
	Blue/Repeat		Blue		

