



Original	Replacement	Original	Replacement
 Power	 Power	 Up / PR +	 Ch +
 Mute	 Mute	 Down / PR -	 Ch -
 1	 1	 Down / PR -	 Down
 2	 2	 Right / Vol +	 Vol +
 3	 3	 Right / Vol +	 Right
 4	 4	 Left / Vol -	 Vol -
 5	 5	 Left / Vol -	 Left
 6	 6	 OK / List	 Ok
 7	 7	 FAV	 Pre Ch
 8	 8	 Exit	 Exit
 9	 9	 Red / Find	 Red
 0	 0	 Yellow / TXT/Subt.	 Subt
 Tv / Radio	 TV/R	 Yellow / TXT/Subt.	 Text
 ← PR	 Back	 Yellow / TXT/Subt.	 Yellow
 EPG	 Guide	 Green / V-Format	 Green
 Menu	 Menu	 Blue / Audio L/R	 Blue
 Up / PR +	 Up	 Blue / Audio L/R	 Dual





Original		Replacement		Original	Replacement
	↑ / Page+		Shift + Up		
	↓ / Page-		Shift + Down		
	Pause		Pause		
	Info		Info		
	TV / AV		AV		
	Sleep		Sleep		
	SAT		Smart		
	Record		Rec		
	Play		Play		
	Stop		Stop		
	Shift		Media		
	<< Fast		<<		
	Fast >>		>>		
	< Slow		I<<		
	Slow >		>>I		

