



 
 














 














Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Setup / OPT /
	 */Options Menu / Home
	 Up
	 [ ]/Display Info / Angle
	 I> Left
	 OK/Enter/Select OK
	 X/Cancel Exit / Cancel / Clear

Original	Replacement
	 Down
	 Return Back / Return
	 Vol+
	 [=]/Start Smart / List
	 Vol-
	 CMSS Display / Media
	 1 1
	 2 2
	 3 3
	 4 4
	 5 5
	 6 6
	 7 7
	 8 8
	 9 9
	 0 0
	 Shift + Pause / Step / Freeze

