































 







 





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Text / Goto
	 Shift + Green / APP / APP / REPEAT
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Original		Replacement		Original		Replacement	
	8		8				
	9		9				
	[G]		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Home		Shift + Menu /				
	Netflix		Shift + Red / Netflix /				
	YouTube		Shift + Yellow / YouTube /				
	prime video		Shift + Blue / Prime				

