



Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 Stop	 Stop	 CH+	 Ch +
 Pause	 Pause	 CH-	 Ch -
 <<<	 <<<	 Vol+	 Vol +
 >>>	 >>>	 Vol-	 Vol -
 <<<	 <<<	 MENU	 Menu
 >>>	 >>>	 SOURCE	 AV
 TV/TXT	 REPEAT TEXT	 DVB	 HOME SMART
 CANCEL	 RETURN BACK	 EXIT	 CLEAR EXIT
 REVEAL	 ZOOM	 OK	 OK
 HOLD	 APP MEDIA	 Up	 Up
 SIZE	 ECO 3D	 Down	 Down
 SUBPAGE	 E-MANUAL D.MENU	 Right	 Right
 INDEX	 DISC NAV LIST	 Left	 Left
 Red	 A	 1	 1
 Green	 B	 2	 2





	Original	Replacement		Replacement
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	-/--	+	Shift + Guide	
	Recall		Pre Ch	
	Picture	+	Shift + Format	
	Sound	+	Shift + Dual	
	Nicam/A2		Options	
	Mute		Mute	
	Sleep		Sleep	
	Tv/Radio		TV/R	
	FAV	+	Shift + Pre Ch	

	Original	Replacement		Replacement
	FAV+	+	Shift + Ch +	
	FAV-	+	Shift + Ch -	
	Pic Format		Format	
	Subtitle		Subt	
	Text	+	Shift + Text	
	Display		Info	
	Language		Dual	
	EPG		Guide	

