











Original	Replacement
 Power	 Power
 TXT	 Text / Goto
 MIX	 Smart / List
 Size	 Zoom / Size
 Index	 Info / Angle
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subcode	 Display / Media
 Cancel	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Red/P.M.	 Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Yellow/Sleep	 Yellow / YouTube / Repeat
 Green/S.M.	 Green / APP / Repeat
 CH-	 CH- / Page-
 Vol-	 Vol-
 Blue/Call	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Select	 OK





Original	Replacement
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Mute	 Mute / Dimmer
 Aspect	 Picture / Format
 Setup/Freeze	 Setup / OPT /
 Subtitle/I/II	 Subtitle / EQ
 Display/FAV	 Fav / Marker / PC
 Search/FAV+/-	 TV/Radio /
 Setup/EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Title	 Sound / Title
 DVD	 Shift + 2
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Eject	 Eject / Surround

Original	Replacement
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+

