 



 

 



 



















 









| Original   | Replacement   |
|--|---|
|  P100     |  Display / Media   |
|  Power    |  Power             |
|  REV      |  << / Tune-        |
|  Doub     |  Audio / Lang I/II |
|  1        |  1                 |
|  2        |  2                 |
|  3        |  3                 |
|  Hold     |  Stop / Hold       |
|  4        |  4                 |
|  5        |  5                 |
|  6        |  6                 |
|  Sub    |  Subtitle / EQ   |
|  Update |  D.Menu / Top    |
|  7      |  7               |
|  8      |  8               |
|  9      |  9               |
|  Mix    |  Text / Goto     |

| Original  | Replacement  |
|---|--|
|  AV      |  AV / Input / RDS   |
|  0       |  0                  |
|  -/--    |  Guide / EPG / -/-- |
|  P+      |  CH+ / Page+        |
|  Up      |  Up                 |
|  Mute    |  Mute / Dimmer      |
|  TV/TXT  |  TV/Radio /         |
|  Menu    |  Menu / Home        |
|  Left    |  Left               |
|  Vol-    |  Vol-               |
|  OK      |  OK                 |
|  Right |  Right            |
|  Vol+  |  Vol+             |
|  Swap  |  Back / Return    |
|  P-    |  CH- / Page-      |
|  Down  |  Down             |
|  16:9  |  Picture / Format |



