




Original	Replacement	Original	Replacement
OFF	+ Shift + Power	Tuning-	<< / Tune-
ON	Power	Input VCR-2	9
Standard	Red / Netflix / Search	Input V.AUX	8
Cinema	Green / APP / Repeat	Input CDR/TAPE	5
Music	Yellow / YouTube / Repeat	Channel+ /	>> / Preset+
DSP Simulation	Blue / Prime Video / Random	Channel+ /	CH+ / Page+
Direct	+ Shift + Red / Netflix /	Input AUX	7
Stereo	+ Shift + Green / APP /	Channel- / Preset-	I<< / Preset-
Virtual Surround	+ Shift + Yellow / YouTube /	Channel- / Preset-	CH- / Page-
5CH/7CH Stereo	+ Shift + Blue / Prime	Mode	Play / Slow
Input PHONO	0	Memory	Pause / Step / Freeze
Input CD	3	Band	Stop / Hold
Input TUNER	6	Shift	Rec / Rec Mode
Tuning+	>> / Tune+	Vol+	Vol+
Input DVD/VDP	2	Vol-	Vol-
Input TV/DBS	1	Muting	Mute / Dimmer
Input VCR	4	Setup	Setup / OPT /





	Original	Replacement	Original	Replacement
	Up			
	Surround			
	Left			
	Enter			
	Right			
	Status / Display			
	Down			
	Surround Back			
	Test Tone			
	Video Select			
	Dimmer			
	Speaker			
	Input Mode			
	Input Analog			
	Input Ext.In			

