









Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol +		Vol+
	Info		Info / Angle		ADD / DEL		Shift + Back / Return
	0		0		PR +		CH+ / Page+
	Recall		Back / Return		Vol -		Vol-
	PMode		Picture / Format		Cancel		Shift + Exit / Cancel / Clear
	I / II		Audio / Lang I/II		PR -		CH- / Page-
	EPG		Guide / EPG / -/--		Red		Red / Netflix / Search





Original	Replacement
	 Green  Green / APP / Repeat
	 Yellow  Yellow / YouTube / Repeat
	 Blue  Blue / Prime Video / Random
	 Play / Pause  Play / Slow
	 Play / Pause  Shift + Play /
	 Stop  Stop / Hold
	 Setup  Setup / OPT /
	 Eject  Eject / Surround
	 I<< / Text  Shift + I<< / Preset-
	 I<< / Text  I<< / Preset-
	 <<<  << / Tune-
	 Size  Zoom / Size
	 S. Title M.  Sound / Title
	 >>I / Hold  >>I / Preset+
	 >>I / Hold  Shift + >>I / Preset+
	 >> / Reveal  >> / Tune+
	 Subpage / Rec  Shift + Rec / Rec Mode

Original	Replacement
	 Subpage / Rec  Rec / Rec Mode
	 Index / List  Smart / List

