



Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Open/Close		Eject		Down		Down
	DVD		Red		Right		Right
	Tuner		Green		Left		Left
	Video		Yellow		Enter		Ok
	TV/AUX		Blue		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	I<<		I<<		Mute		Mute
	<<		<<		Setup		Options
	>>		>>		Pause/Step		Pause
	>>I		>>I		Menu/Return		Menu
	Play		Play		Goto Auto		Back
	Stop		Stop		1		1
	SP.Setup		Media		2		2
	CH-Level		Guide		3		3
	SR.Mode		List		4		4
	Title		Info		5		5





Original		Replacement		Original		Replacement	
	6		6		MPX PTY Search		Shift + AV
	7		7		PBC		Shift + TV/R
	8		8				
	9		9				
	0		0				
	DISP/FM mode		TV/R				
	Delay Time		Exit				
	Test Tone		Format				
	Subtitle		Subt				
	Slow		AV				
	Audio		Dual				
	A-B		Smart				
	Zoom		Shift + Eject				
	Angle		3D				
	Random		D. Menu				
	Repeat		Text				
	Digest RDS		Shift + Subt				



Mode