 





 

 



 







 



 



 



 



 



























 







Original		Replacement		Original		Replacement	
	P100		Guide / EPG / -/--		AV		AV / Input / RDS
	Power		Power		0		0
	REV		Sleep / Timer		TV		TV/Radio /
	DOUB		Smart / List		P+		Up
	1		1		P+		CH+ / Page+
	2		2		Mute		Mute / Dimmer
	3		3		TV/TXT		Text / Goto
	Hold		Stop / Hold		Menu		Menu / Home
	4		4		Vol-		Vol-
	5		5		Vol-		Left
	6		6		OK		OK
	SUB		Subtitle / EQ		Vol+		Vol+
	Update		Display / Media		Vol+		Right
	7		7		SWAP		Back / Return
	8		8		P-		CH- / Page-
	9		9		P-		Down
	MIX		D.Menu / Top		16:9		Picture / Format





Original		Replacement	
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet/Info		Info / Angle
	[]		Zoom / Size
	PC		Fav / Marker / PC
	PT		Setup / OPT /

Original	Replacement

