



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Shift + Guide
 DVD	 Eject	 Recall	 Back
 Mute	 Mute	 Red / DVD P.Scan	 Red
 PMode	 Shift + Format	 Green / DVD Goto	 Green
 SMode	 Shift + Dual	 Yellow / DVD	 Yellow
 Nicam	 Dual	 Blue / DVD Media	 Blue
 Aspect	 Format	 Blue / DVD Media	 Media
 1	 1	 PR+ / Up	 Ch +
 2	 2	 PR+ / Up	 Shift + Up
 3	 3	 PR- / Down	 Ch -
 4	 4	 PR- / Down	 Shift + Down
 5	 5	 Vol+ / Right	 Vol +
 6	 6	 Vol+ / Right	 Shift + Right
 7	 7	 Vol- / Left	 Vol -
 8	 8	 Vol- / Left	 Shift + Left
 9	 9	 Menu	 Menu
 0	 0	 Source	 AV

Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Shift + Guide
 DVD	 Eject	 Recall	 Back
 Mute	 Mute	 Red / DVD P.Scan	 Red
 PMode	 Shift + Format	 Green / DVD Goto	 Green
 SMode	 Shift + Dual	 Yellow / DVD	 Yellow
 Nicam	 Dual	 Blue / DVD Media	 Blue
 Aspect	 Format	 Blue / DVD Media	 Media
 1	 1	 PR+ / Up	 Ch +
 2	 2	 PR+ / Up	 Shift + Up
 3	 3	 PR- / Down	 Ch -
 4	 4	 PR- / Down	 Shift + Down
 5	 5	 Vol+ / Right	 Vol +
 6	 6	 Vol+ / Right	 Shift + Right
 7	 7	 Vol- / Left	 Vol -
 8	 8	 Vol- / Left	 Shift + Left
 9	 9	 Menu	 Menu
 0	 0	 Source	 AV





Original	Replacement
 Sleep	 Sleep
 Display Info	 Info
 Enter	 Shift + Ok
 TXT / DVD Repeat	 Text
 Hold / DVD A-B	 TV/R
 Lucidity / DVD Language	 Options
 Subpage / DVD Subtitle	 Subt
 Index / DVD Setup	 Smart
 Size / DVD	 Shift + D. Menu
 Reveal / DVD Title	 List
 Cancel / DVD	 Shift + Eject
 DTV Menu / DVD	 D. Menu
 DTV Menu / DVD	 <<
 DVD >>	 >>
 FAV / DVD Play/Pause	 Pre Ch
 FAV / DVD Play/Pause	 Play
 FAV / DVD Play/Pause	 Pause

Original	Replacement
 Exit / DVD Stop	 Exit
 Exit / DVD Stop	 Stop
 Page Up / DVD	 Shift + Ch +
 Page Down / DVD	 Shift + Ch -
 Up	 Up
 Left	 Left
 OK / DVD Select	 Ok
 Right	 Right
 Down	 Down
 EPG / DVD □	 Guide

