



 







Original	Replacement	Original	Replacement
Up	Up	[ ]	Subtitle / EQ
Page+	CH+ / Page+	7	7
Left	Left	8	8
Vol-	Vol-	9	9
OK	OK	Input	AV / Input / RDS
Right	Right	Sleep	Sleep / Timer
Vol+	Vol+	0	0
Page-	CH- / Page-	Mute	Mute / Dimmer
Down	Down	Text	Text / Goto
Power	Power	Woofer	Setup / OPT /
1	1	(( ))	Sound / Title
2	2	Audio	Audio / Lang I/II
3	3	Index	Info / Angle
Menu	Menu / Home	Normal	Smart / List
4	4	Recall	Back / Return
5	5	System	D.Menu / Top
6	6	Time	Shift + Sleep / Timer





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

