 









 
 
 
 

 


 



 








 

 



 

 





 





 





 









Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 SWAP	 Fav / Marker / PC
	 D.Menu / Top
	 Smart / List
 SOURCE	 AV / Input / RDS
 MENU	 Menu / Home
	 Up
	 Left
 OK	 OK
	 Right
	 Down
 C	 Exit / Cancel / Clear
 DISP.	 Display / Media
	 Shift + Red / Netflix /
	 Back / Return





Original	Replacement	Original	Replacement
	CH+ / Page+		Yellow / YouTube / Repeat
	Info / Angle		Blue / Prime Video / Random
	Vol+		
	CH- / Page-		
	Mute / Dimmer		
	Vol-		
	Rec / Rec Mode		
	Pause / Step / Freeze		
	I<< / Preset-		
	>>I / Preset+		
	<< / Tune-		
	Play / Slow		
	Stop / Hold		
	>> / Tune+		
	Red / ↑ / Zoom		
	Red / ↑ / Zoom		
	Green / ↓ / Repeat		

