 







 







 










 

 

 
























 





















Original	Replacement	Original	Replacement
 Standby	 Power	 Display	 Display / Media
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 0	 0	 Vol-	 Vol-
 Aspect	 Shift + Format / Picture / Format	 Rec	 Rec / Rec Mode
 Recall	 Back / Return	 CH+	 CH+ / Page+
 TVG	 Guide / EPG / -/--	 CH-	 CH- / Page-
 Subtitle	 Subtitle / EQ	 Media	 Shift + Display / Media
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS





Original	Replacement
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subpage	 Setup / OPT /
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Index	 Info / Angle
 Size	 Zoom / Size
 <<	 << / Tune-
 >>	 >> / Tune+
  <<	  << / Preset-
 >>	 >>  / Preset+
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

