






















 
















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Source	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II
 Aspect	 Eject / Surround
 Display	 Display / Media
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 Up	 Up
 Left	 Left
 OK/CH List	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home





Original	Replacement
 Exit	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/--
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 PVR/Hold	 Setup / OPT /
 Size	 Zoom / Size
 FAV	 Fav / Marker / PC
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop/Auto	 Stop / Hold
 Reveal	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 <</Nicam	 << / Tune-
 >>/Freeze	 >> / Tune+
 I<</Index	 I<< / Preset-

Original	Replacement
 >>I/Subpage	 >>I / Preset+

