










 

 

 


 


 




	Original	Replacement	Original	Replacement
	Power			
	Mute			
	+			
	-			
	Line 1			
	Line 2			
	OPT			
	COX			
	Bluetooth			
	Play			
	Pause			
	I<<			
	>>I			

