







 

 









 

 

 

 

 

 





 
 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 PIP-	 Shift + CH- /
 PIP	 Zoom / Size
 PIP+	 Shift + CH+ /
 Wide	 Picture / Format
 Swap	 Smart / List
 Lang(AD)	 Audio / Lang I/II
 Timers	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Text	 Text / Goto
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 Vol+	 Vol+
 Tv/Radio	 Tv/Radio /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 PR-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/-
 Up	 Up





	Original	Replacement	Original	Replacement
	Exit	 Exit / Cancel / Clear		
	Left	 Left		
	OK	 OK		
	Right	 Right		
	Menu	 Menu / Home		
	Down	 Down		
	Back/P<P	 Back / Return		
	Subtitle	 Subtitle / EQ		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	LIB	 Setup / OPT /		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		

