










 

 

 

 



 

 

 

 

 

 

 




 




 
 

 

 











 

 


 

 









 




 




 
 
 

 

 


 

 

 





Original	Replacement
 Power	 Power
 Source	 AV
 Sleep	 Sleep
 Picture Mode	 Format
 Sound Mode	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [<>] / Aspect	 3D
 Guide	 Guide

Original	Replacement
 Back	 Back
 Eco	 Shift + 3D
 Menu	 Menu
 i	 Info
 Audio	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Fun-Link	 Media		
 [...]	 Subt		
 [≡◆]	 D. Menu		
 [≡o]	 Smart		
 [≡+]	 Options		
 [≡=]	 Text		
 [≡?]	 TV/R		
 [≡i]	 List		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 <<	 <<		

