




 







 

 

 

 

 





 

 

 

 

 

 




Original	Replacement
 Power	 Power
 Mute	 Mute
 Software	 Shift + Media
 Play List	 List
 USB	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 ←PR	 Back

Original	Replacement
 TV / AV	 AV
 Zoom	 Eject
 Sleep	 Sleep
 Red / Find	 Red
 Green / V-Format	 Green
 Green / V-Format	 Format
 Yellow / TXT	 Yellow
 Yellow / TXT	 Text
 Blue / Audio L/R	 Blue
 Blue / Audio L/R	 Dual
 Menu	 Menu
 Exit	 Exit
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right





Original		Replacement		Original		Replacement	
	Right / Vol +		Vol +		Slow >		>>I
	Left / Vol -		Left		Pause		Pause
	Left / Vol -		Vol -				
	OK / List		Ok				
	EPG		Guide				
	Info		Info				
	SAT		Smart				
	FAV		Pre Ch				
	Page +		Shift + Ch +				
	Page -		Shift + Ch -				
	Play		Play				
	Stop		Stop				
	Rec		Rec				
	<< Fast		<<				
	Fast >>		>>				
	Shift		Subt				
	< Slow		I<<				

