

 

 















 



 



 







 


 
 











 











 





| Original | | Replacement | | Original | | Replacement | |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------|-----------------|---------------------------------------------------------------------------------------|-----------------------|
|  | Power |  | Power |  | 0 |  | 0 |
|  | i |  | Info / Angle |  | Mute |  | Mute / Dimmer |
|  | Analog Menu |  | Menu / Home |  | Exit |  | Exit / Cancel / Clear |
|  | Digital Menu |  | D.Menu / Top |  | Vol+ |  | Vol+ |
|  | 1 |  | 1 |  | Up |  | Up |
|  | 2 |  | 2 |  | P+ |  | CH+ / Page+ |
|  | 3 |  | 3 |  | Left |  | Left |
|  | Input Select |  | AV / Input / RDS |  | Enter/CH List |  | OK |
|  | 4 |  | 4 |  | Enter/CH List |  | Smart / List |
|  | 5 |  | 5 |  | Right |  | Right |
|  | 6 |  | 6 |  | Vol- |  | Vol- |
|  | TV/DVB-T |  | Display / Media |  | Down |  | Down |
|  | 7 |  | 7 |  | P- |  | CH- / Page- |
|  | 8 |  | 8 |  | TV/Radio |  | TV/Radio / |
|  | 9 |  | 9 |  | [≡] |  | Text / Goto |
|  | Guide (EPG) |  | Guide / EPG / -/- |  | [≡o] [≡o]/P<->P |  | Back / Return |
|  | Timer |  | Sleep / Timer |  | Picture Size |  | Picture / Format |



