 


 

 

 
 



 
 




 


 

 

 

 
 
 

 

 




Original	Replacement	Original	Replacement
	Power		Mute
	1		TV
	2		Back
	3		Menu
	4		Up
	5		Down
	6		Right
	7		Left
	8		Ok
	9		Dual
	0		Text
	AV		Info
	-/--		Play / Pause
	Ch +		Pause
	Ch -		Stop
	Vol +		Rec
	Vol -		Red



