



 







































 



























Original	Replacement	Original	Replacement
 Power	 Power	 V -	 Vol-
 Mute	 Mute / Dimmer	 Home	 Shift + Menu /
 1	 1	 CH -	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Source	 AV / Input / RDS
 5	 5	 Left	 Left
 6	 6	 Enter	 OK
 7	 7	 Right	 Right
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Down	 Down
 List	 Smart / List	 Display	 Display / Media
 0	 0	 P.Mode	 Picture / Format
 Recall	 Back / Return	 S.Mode	 Sound / Title
 V +	 Vol+	 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format	 MTS	 Shift + Smart / List
 CH +	 CH+ / Page+	 Rec	 Rec / Rec Mode





Original		Replacement		Original		Replacement	
	Guide		Guide / EPG / -/--		CAP		Shift + Display / Media
	Red		Red / Netflix / Search		Subtitle		Subtitle / EQ
	Green		Green / APP / Repeat		TV / Radio		TV/Radio /
	Yellow		Yellow / YouTube / Repeat		FAV		Fav / Marker / PC
	Blue		Blue / Prime Video / Random		Size / Mouse		Zoom / Size
	<< / Index		<< / Tune-		Hold / Refresh		Stop / Hold
	<< / Index		Shift + << /				
	Play/Pause /		Shift + Play /				
	Play/Pause /		Pause / Step / Freeze				
	Play/Pause /		Play / Slow				
	>> / TTX		>> / Tune+				
	>> / TTX		Shift + >> /				
	I<< / Sub.Pg		Shift + I<< / Preset-				
	I<< / Sub.Pg		I<< / Preset-				
	>>I / Reveal		>>I / Preset+				
	Stop / Mix		Shift + Rec / Rec Mode				
	Stop / Mix		Shift + Stop /				

Hold

