

 



















 



 











 







 









Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Info / Angle
 4	 4
 5	 5
 6	 6
 [ <> ]	 Picture / Format
 >	 >>  / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
  <	  << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Replacement
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat







Original	Replacement
Power	Power
1	1
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
[ <> ]	Zoom / Size
>	>>  / Preset+
7	7
8	8
9	9
?	Smart / List
<	<< / Preset-
0	0
i/OSD	Display / Media

Original	Replacement
Disc Menu	D.Menu / Top
Disc Menu	Menu / Home
Up	Up
P+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
TXT	Text / Goto
<<	<< / Tune-
Down	Down
P-	CH- / Page-
TV-G	Guide / EPG / -/-
>>	>> / Tune+
Red/Picture	Picture / Format
Red/Picture	Red / Netflix / Search







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	>		>>  / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	<		<< / Preset-
	0		0
	Mute		Mute / Dimmer
	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Red / Netflix / Search
	Red/Image/I>	+	Shift + Play / Slow







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	PIP/Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	7		7
	8		8
	9		9
	?		Smart / List
	I<		I<< / Preset-
	>I		>>I / Preset+
	0		0
	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	P+		CH+ / Page+
	Up		Up
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	P-		CH- / Page-
	Down		Down
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Picture / Format
	Red/Image/I>		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat



