



Original	Replacement	Original	Replacement
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/Sat	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+	Vol +
Down	Down	Vol-	Vol -
Right	Right	CH/Tuner Up	Ch +
Left	Left	CH/Tuner Down	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original	Replacement
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Replacement
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original	Replacement	Original	Replacement
 Power On	 Power	 Cable/Sat	 Green
 Power Off	 Shift + Power	 CD	 Yellow
 Left	 Left	 TV	 Blue
 Right	 Right	 Mute	 Mute
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Vol+ Stereo	 Vol +		
 Vol- Stereo	 Vol -		
 Stereo	 Dual		





Original	Replacement
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/SAT	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
CH/Tuner Down	Ch +
CH/Tuner Up	Ch -
Speaker 1	Options
Speaker 2	Dual





Original		Replacement		Original		Replacement	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

