 











 
 
 
 

 


 



 









 

 



 



 









 







 


 






| Original   | Replacement  |
|--|--|
|  Power    |  Power                      |
|  Sleep    |  Sleep / Timer              |
|  Screen   |  Picture / Format           |
|  Presets  |  Setup / OPT /              |
|  ↔        |  TV/Radio /                 |
|  FAV      |  Shift + Fav / Marker / PC |
|  Lang     |  Audio / Lang I/II         |
|  Subtitle |  Subtitle / EQ             |
|  TXT      |  Text / Goto               |
|  1        |  1                          |
|  2       |  2                         |
|  3      |  3                        |
|  4      |  4                        |
|  5      |  5                        |
|  6      |  6                        |
|  7      |  7                        |
|  8      |  8                        |

| Original  | Replacement   |
|---|---|
|  9       |  9                         |
|  EPG     |  Guide / EPG / -/-         |
|  0       |  0                         |
|  SWAP    |  Fav / Marker / PC         |
|          |  D.Menu / Top              |
|          |  Smart / List              |
|  SOURCE  |  AV / Input / RDS          |
|  MENU    |  Menu / Home               |
|          |  Up                        |
|          |  Left                      |
|  OK     |  OK                       |
|        |  Right                   |
|        |  Down                    |
|  C     |  Exit / Cancel / Clear   |
|  DISP. |  Display / Media         |
|        |  Shift + Red / Netflix / |
|        |  Back / Return           |





|   | Original       | Replacement  |   | Original    | Replacement   |
|---|----------------|--|---|-------------|---|
|    | CH+            |  CH+ / Page+              |  | Yellow/Root |  Yellow / YouTube / Repeat   |
|    | Info           |  Info / Angle             |  | Blue/Title  |  Blue / Prime Video / Random |
|    | Vol+           |  Vol+                     |   |             |   |
|    | CH-            |  CH- / Page-              |   |             |   |
|    | Mute           |  Mute / Dimmer            |   |             |   |
|    | Vol-           |  Vol-                     |   |             |   |
|    | Rec            |  Rec / Rec Mode           |   |             |   |
|    | Pause          |  Pause / Step / Freeze    |   |             |   |
|    | I<<            |  I<< / Preset-            |   |             |   |
|    | >>I            |  >>I / Preset+            |   |             |   |
|   | <<             |  << / Tune-              |   |             |   |
|  | Play           |  Play / Slow            |   |             |   |
|  | Stop           |  Stop / Hold            |   |             |   |
|  | >>             |  >> / Tune+             |   |             |   |
|  | Red/↑/Zoom     |  Red / Netflix / Search |   |             |   |
|  | Red/↑/Zoom     |  Zoom / Size            |   |             |   |
|  | Green/↓/Repeat |  Green / APP / Repeat   |   |             |   |

