



 
 
 





 

 
 
 

 

 



 


 









 


 





 


 



 
 




| Original | Replacement | Original | Replacement |
|---------------------------------------------------------------------------------------|--------------|---------------------------------------------------------------------------------------|-------------|
|  | Power |  | Power |
|  | Open / Close |  | Eject |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Display |  | Info |
|  | +10 |  | Guide |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Mute |  | Mute |
|  | DVD Menu |  | D. Menu |
|  | Setup |  | Menu |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | << |  | << |
|  | >> |  | >> |
|  | Play |  | Play |
|  | Pause / Step |  | Pause |
|  | Slow |  | Rec |
|  | Stop |  | Stop |
|  | Program |  | Sleep |
|  | Subtitle |  | Subt |



